

Owners Manual and Safety Instructions

v1

Read and Save this Manual.

Keep this manual for the safety warnings and precautions. Refer to this manual for operating, maintenance and inspection procedures. Log the items serial number on the front of this manual. Keep purchase receipt with this manual in a safe dry location for future reference.



Front Receiver Hitch for Bronco 6 Gen.

Model: FH-BR-HM

For Modular bumper High Mount winch plate or compatible installation.



For help with this product please visit our website at www.xrack.us/help or call 888-998-5739 or 516-338-0884 for assistance. Never overload the rated weight of the vehicle's hitch capacity which may be lower than the rating of the cargo carrier. Tools are not included for installation to the vehicle.

WARNING

READ THIS MANUAL BEFORE USING THIS PRODUCT. FAILURE TO DO SO CAN RESULT IN SERIOUS INJURY. SAVE THIS MANUAL

WARNING

Do not operate with unstable loads
Do not load beyond rated capacity
Always strap load securely
Distribute load evenly
Do NOT sit, Stand or ride on
Do NOT exceed 65 MPH with Carrier attached
Follow DOT Guidelines for installation and use

ADVERTENCIA

No opere con cargas inestables
No cargue más allá de la capacidad nominal
Siempre cargue la carga de forma segura
DISTRIBUIR carga uniformemente
No se siente, se pare o monte
NO exceda 65 MPH con Carrier adjunto
Siga las pautas DOT para instalación y uso

ADVERTISSEMENT

Ne pas utiliser avec des charges instables
Ne chargez pas au-delà de la capacité nominale
Toujours attacher la charge en toute sécurité
DISTRIBUER charge uniformément
Ne pas s'asseoir, se tenir ou monter sur
Ne dépassez PAS 104 kilomètres à l'heure avec le transporteur attaché
Suivez les directives des autorités pour l'installation et l'utilisation

Installation Instructions

Follow these instructions to install the Front Receiver Hitch to your Bronco high winch mount.

Release pressure on winch rope by disengaging winch and pull out about 1' of rope to make sure winch does not move when bolts are loosened.

Remove 4 bolts Fig.1 holding winch and confirm they are 10mx1.5 bolts. Add hitch receiver plate with flanged end facing forward Fig. 2. Attach provided flange bolts in the same 4 holes. Tension bolts to recommended torque from winch manufacturer.

Rated for up to 350lbs(Total combined with accessories and gear) , but weight limit is determined by bumper and winch mount.

Do not exceed rating for winch mount and or vehicle bumper.

Suggested tools:



10mm socket Wrench
or
Adjustable wrench




Not Included

Fig.1



Fig.2

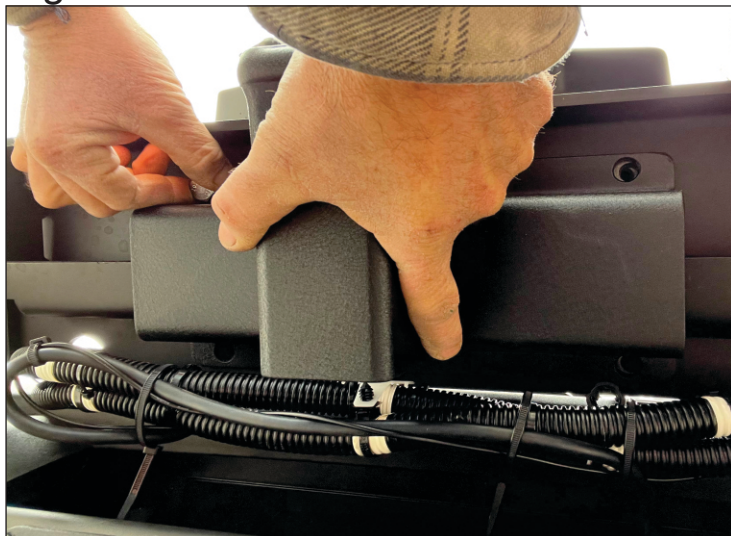

Included:
10 x 1.5 x 40mm

x 4

Safety Information

1. Read all instructions before using this product
2. Check for missing or damaged parts
3. Do not exceed the receiver hitch maximum load capacity as listed above.
4. Only use accessories with 2" receiver hitch or Proper reducing sleeve ***Vehicle hitch ratings may be lower than the hitches load capacity. DO NOT overload your hitch or exceed vehicle hitch ratings.
5. Always distribute load evenly.
6. Always secure load with proper straps. All straps should be checked after driving a few miles and adjusted accordingly. Make periodic stops to check straps have not loosened or load has shifted or become unstable.
7. DO NOT sit, stand or ride on
8. DO NOT exceed 65MPH while carrier is attached, not for extreme off road conditions
9. Follow D.O.T. Guidelines for installation and use.
10. Be aware of road conditions! Sudden bumps and pot holes can cause an instant dynamic load on the cargo accessories which may result in damage to the equipment. Driving over a bump can create a brief excess load on your carrier and vehicle hitch. Always check your load and hitch connections after going over any large bumps or dips in the road.
11. Check tension on bolts periodically.



Failure to comply with these instructions and safety precautions can result in serious injury or damage to equipment or vehicle



Maintenance and Service

Always inspect Hitch before use Check for:

- Loose or missing hardware
- Cracked or broken parts
- Any bent parts

DO NOT use Cargo Carrier or accessories if there is damage or missing parts.

Cleaning/Care:

Clean with a mild soap and sponge or rag.

Keep inside of receiver tube clean from debris

Always thoroughly dry before storage.

LIMITED WARRANTY

B&R Innovations, LLC (B&R) warrants this product to be free of defects in material and workmanship during the warranty period. Our warranty obligation is to provide a replacement for a defective original part if the part is covered by the warranty, after we receive a proper request from the warrantee (you) for warranty service.

Who may request service?

Only a warrantee may request service. You are a warrantee if you purchased the product from B&R or from an authorized distributor AND B&R has been fully paid.

What is an "original part"?

An original part is a part used to make the product as shipped to the warrantee.

What is a "proper request"?

A request for warranty service is proper if B&R receives: 1) a photocopy of the Customer Invoice that displays the shipping date; AND 2) a written request for warranty service including your name and phone number. Send requests by any of the following methods:

Mail, Fax or Email

X-Rack c/o B&R Innovations, LLC

Info@BandRinnovations.com

Fax: 917-677-8449

999 S. Oyster Bay Rd, Ste. 401

Bethpage, NY 11714

In the written request, list the parts believed to be defective and include the address where replacements should be delivered.

What is covered under the warranty?

After B&R receives your request for warranty service, an authorized representative will contact you to determine whether your claim is covered by the warranty. Before providing warranty service, B&R may require you to send the entire product, or just the defective part or parts, to its facility in Bethpage, NY. The warranty covers defects in the following original dynamic components: motors, hydraulic pumps, electronic controllers, switches and cylinders. It also covers defects in original parts that wear under normal usage conditions ("wearing parts"), such as bearings, hoses, wheels, seals, brushes, and batteries.

How long is the warranty period?

The warranty period for X-Rack Frame and Receiver tube is 1 year. The warranty period begins on the date when B&R ships the product to the warrantee. If the product was purchased from an authorized distributor, the period begins when the distributor ships the product. B&R may extend the warranty period for products shipped from authorized distributors by up to 30 days to account for shipping time.

If a defective part is covered by the warranty, what will B&R do to correct the problem?

B&R will provide an appropriate replacement for any covered part. An authorized representative of B&R will contact you to discuss your claim.

What is not covered by the warranty?

1. Labor;
2. Freight;
3. Occurrence of any of the following, which automatically voids the warranty:
 - Product misuse;
 - Negligent operation or repair;
 - Corrosion or use in corrosive conditions;
 - Inadequate or improper maintenance;
 - Damage sustained during shipping;
 - Accidents involving the product;
 - Unauthorized modifications: DO NOT modify the product IN ANY WAY without first receiving written authorization from B&R. Modification(s) might make the product unsafe to use or might cause excessive and/or abnormal wear.
4. Hardware
5. Non X-Rack accessories
6. Powder coating chips and scratches, and is very difficult to fix or repair. Chips and scratches are a direct result from day to day use and are not covered under warranty.

Do any other warranties apply to the product?

B&R makes no other express warranties. All implied warranties are disclaimed to the extent allowed by law. Any implied warranty not disclaimed is limited in scope to the terms of this Limited Warranty.