


Read and Save this Manual.

Keep this manual for the safety warnings and precautions. Refer to this manual for operating, maintenance and inspection procedures. Log the items serial number on the front of this manual. Keep purchase receipt with this manual in a safe dry location for future reference.



Front Hitch 4 Rod Angled Holder Bundle

Models: XR-RH-Front Bundle 32 & XR-RH-Front Bundle 19

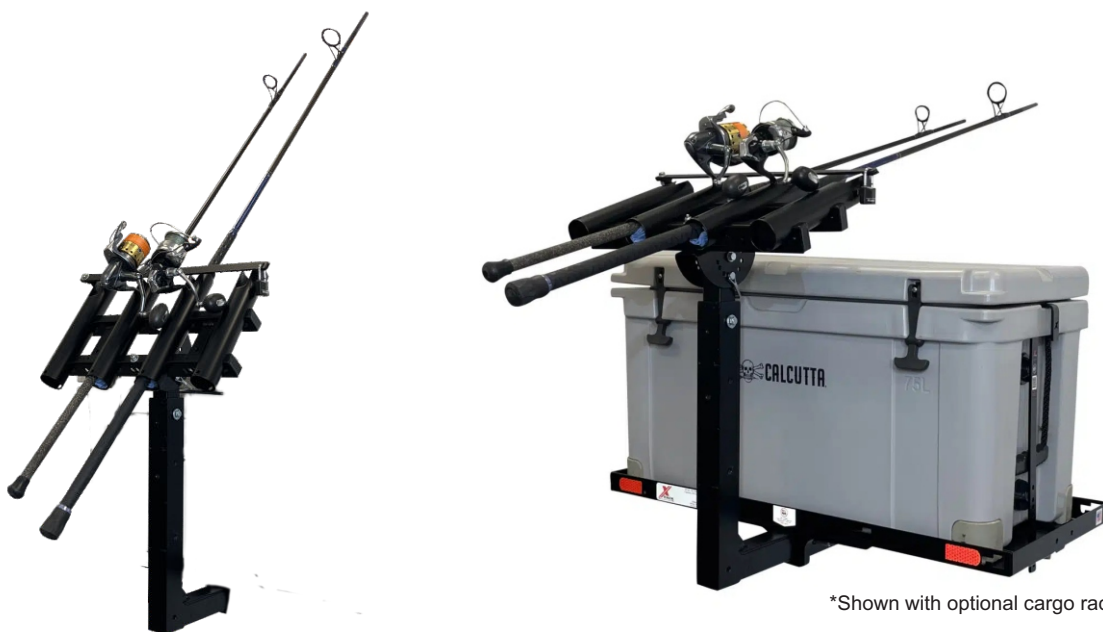

*Shown with optional cargo rack

NOTE: ALWAYS CHECK HEIGHT OF RODS FOR OVERHEAD OBSTRUCTIONS AND GROUND CLEARANCE WHEN TRANSPORTING RODS ON VEHICLES. ADHERE TO LOCAL AND STATE REGULATIONS.

For help with this product please visit our website at www.xrack.us/help or call 888-998-5739 or 516-338-0884 for assistance. Never overload the rated weight of the vehicle's load capacity which may be lower than the rating of the accessory rack. Some tools are not included for installation to the vehicle.

⚠ WARNING

READ THIS MANUAL BEFORE USING THIS PRODUCT. FAILURE TO DO SO CAN RESULT IN SERIOUS INJURY. SAVE THIS MANUAL

⚠ WARNING

Do not operate with unstable loads
Do not load beyond rated capacity
Always strap load securely
Distribute load evenly
Do NOT sit, Stand or ride on
Do NOT exceed 65 MPH with Carrier attached
Follow DOT Guidelines for installation and use

⚠ ADVERTENCIA

No opere con cargas inestables
No cargue más allá de la capacidad nominal
Siempre cargue la carga de forma segura
DISTRIBUIR carga uniformemente
No se siente, se pare o monte
NO exceda 65 MPH con Carrier adjunto
Siga las pautas DOT para instalación y uso

⚠ ADVERTISSEMENT

Ne pas utiliser avec des charges instables
Ne chargez pas au-delà de la capacité nominale
Toujours attacher la charge en toute sécurité
DISTRIBUER charge uniformément
Ne pas s'asseoir, se tenir ou monter sur
Ne dépassez PAS 104 kilomètres à l'heure avec le transporteur attaché
Suivez les directives des autorités pour l'installation et l'utilisation

Installation Instructions

Required tools:



2 - 7/16" Open End Wrench
or
Adjustable wrenches



2 - 1/2" Open End Wrench
or
Adjustable wrenches

Not Included

Lock Bars:

Install lock bars and PVC inserts first before installing brackets to the vehicle. Check your pole butt diameter before installing PVC inserts. Some poles butts are large and will not fit with insert. To install PVC inserts, wet with a bit of soapy water then insert into the X-Rocket. Install lock bar rod holder. Lock bar should be snug enough to move it but remain in place and don't move freely. Use 5/16" x 3/4" bolt with one washer between lock bar and bracket and one before lock nut. Use any padlock with up to 5/16" shackle or use a carabiner to keep poles in place while driving (not included).

Angle-R Bracket:

Angle-R Bracket may be flipped around to achieve slightly different angles. It is best to test fit with all bolts and pins loose and insert rods till the proper angle is reached. Install Angle-R Bracket to 4 rod holder using 1 - 1/4" x 1.75" bolt, 2 - washers and 1 - Lock nut x2. Insert bolt from Angle-R bracket and nuts should be on rod holder side.

Post mount tube:

To install post mount tube use 1 - 5/16" x 2.5" bolt, 2 - washers, and Lock nut. Before tightening, insert 1/4" pin to any of the holes on the angle-R bracket through the post mount tube to keep the bolt centered, then tighten the bolt snug but do not over tighten. You should be able to move the tube with a little pressure to use different angles but should be snug. If pin does not line up, loosen bolt and re-center then tighten.

Fixed Wing Post:



Install Fixed wing post to hitch of vehicle. There are 3 positions that can be used for the hitch bolt. Always insert as much as possible to hitch. Internal Nut can be moved to either position. Insert Angle-R bracket with post mount tube to top of Fixed Wing Post. Attach with 5/16" x 3" bolt and tighten. Insert treaded knob to tighten any remaining movement.

Optional Wings can be installed on the Fixed post to add more gear like traction boards, Hi-Lo Jacks and more.

Note:

For highway driving, we recommend use of Nite Ize® Gear tie or short bungee cord to limit movement on poles (not included).

Installation Instructions

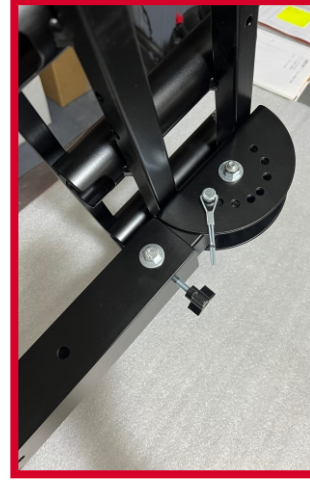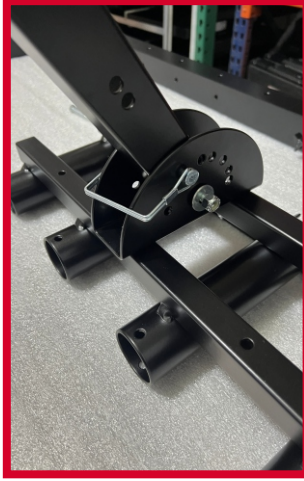

Parts:



Included Hardware:
2- 1/4" x 1.75" Bolt
4- 1/4" Washers
2- 1/4" Lock Nut
1- 1/4" Pin
1- 5/16" x 3" Bolt
1- 5/16" x 2.5" Bolt
4 - 5/16" Washers
2 - 5/15" Lock Nuts
1- 1/4" Threaded Knob
1- Threaded Hitch pin



Fixed Wing Post 32 or 19



4 Rod Holder with Lock Bar



Post Mount Tube



Angle-R Bracket

LIMITED WARRANTY

B&R Innovations, LLC (B&R) warrants this product to be free of defects in material and workmanship during the warranty period. Our warranty obligation is to provide a replacement for a defective original part if the part is covered by the warranty, after we receive a proper request from the warrantee (you) for warranty service.

Who may request service?

Only a warrantee may request service. You are a warrantee if you purchased the product from B&R or from an authorized distributor AND B&R has been fully paid.

What is an “original part”?

An original part is a part used to make the product as shipped to the warrantee.

What is a “proper request”?

A request for warranty service is proper if B&R receives: 1) a photocopy of the Customer Invoice that displays the shipping date; AND 2) a written request for warranty service including your name and phone number. Send requests by any of the following methods:

Mail, Fax or Email

X-Rack c/o B&R Innovations, LLC

Info@BandRinnovations.com

Fax: 917-677-8449

999 S. Oyster Bay Rd, Ste. 402

Bethpage, NY 11714

In the written request, list the parts believed to be defective and include the address where replacements should be delivered.

What is covered under the warranty?

After B&R receives your request for warranty service, an authorized representative will contact you to determine whether your claim is covered by the warranty. Before providing warranty service, B&R may require you to send the entire product, or just the defective part or parts, to its facility in Bethpage, NY. The warranty covers defects in the following original dynamic components: motors, hydraulic pumps, electronic controllers, switches and cylinders. It also covers defects in original parts that wear under normal usage conditions (“wearing parts”), such as bearings, hoses, wheels, seals, brushes, and batteries.

How long is the warranty period?

The warranty period for X-Rack Frame and Receiver tube is 1 year. The warranty period begins on the date when B&R ships the product to the warrantee. If the product was purchased from an authorized distributor, the period begins when the distributor ships the product. B&R may extend the warranty period for products shipped from authorized distributors by up to 30 days to account for shipping time.

If a defective part is covered by the warranty, what will B&R do to correct the problem?

B&R will provide an appropriate replacement for any covered part. An authorized representative of B&R will contact you to discuss your claim.

What is not covered by the warranty?

1. Labor;
2. Freight;
3. Occurrence of any of the following, which automatically voids the warranty:
 - Product misuse;
 - Negligent operation or repair;
 - Corrosion or use in corrosive conditions;
 - Inadequate or improper maintenance;
 - Damage sustained during shipping;
 - Accidents involving the product;
 - Unauthorized modifications: DO NOT modify the product IN ANY WAY without first receiving written authorization from B&R. Modification(s) might make the product unsafe to use or might cause excessive and/or abnormal wear.
4. Hardware
5. Non X-Rack accessories
6. Powder coating chips and scratches, and is very difficult to fix or repair. Chips and scratches are a direct result from day to day use and are not covered under warranty.

Do any other warranties apply to the product?

B&R makes no other express warranties. All implied warranties are disclaimed to the extent allowed by law. Any implied warranty not disclaimed is limited in scope to the terms of this Limited Warranty.