

## Read and Save this Manual.

Keep this manual for the safety warnings and precautions. Refer to this manual for operating, maintenance and inspection procedures. Log the items serial number on the front of this manual. Keep purchase receipt with this manual in a safe dry location for future reference.



## X-ROCKET FISHING ROD HOLDERS.

Models: Mounts JL-P and JL-D  
(XR-RH-S-P, XR-RH-S-D, XR-RH-AD-S-P, XR-RH-AD-S-D)  
**Jeep Wrangler JL/Gladiator edition**  
**Single and Double Rod Configurations**



For help with this product please visit our website at [www.xrack.us/help](http://www.xrack.us/help) or call 888-998-5739 or 516-338-0884 for assistance. Never overload the rated weight of the vehicle's load capacity which may be lower than the rating of the accessory rack. Some tools are not included for installation to the vehicle.

### **⚠ WARNING**

READ THIS MANUAL BEFORE USING THIS PRODUCT. FAILURE TO DO SO CAN RESULT IN SERIOUS INJURY. SAVE THIS MANUAL

### **⚠ WARNING**

Do not operate with unstable loads  
Do not load beyond rated capacity  
Always strap load securely  
Distribute load evenly  
Do NOT sit, Stand or ride on  
Do NOT exceed 65 MPH with Carrier attached  
Follow DOT Guidelines for installation and use

### **⚠ ADVERTENCIA**

No opere con cargas inestables  
No cargue más allá de la capacidad nominal  
Siempre cargue la carga de forma segura  
DISTRIBUIR carga uniformemente  
No se siente, se pare o monte  
NO exceda 65 MPH con Carrier adjunto  
Siga las pautas DOT para instalación y uso

### **⚠ ADVERTISSEMENT**

Ne pas utiliser avec des charges instables  
Ne chargez pas au-delà de la capacité nominale  
Toujours attacher la charge en toute sécurité  
DISTRIBUER charge uniformément  
Ne pas s'asseoir, se tenir ou monter sur  
Ne dépassez PAS 104 kilomètres à l'heure avec le transporteur attaché  
Suivez les directives des autorités pour l'installation et l'utilisation

# Installation Instructions

## Lock Bars:

Install lock bars and PVC inserts first before installing brackets to the vehicle. Check your pole butt diameter before installing PVC inserts. Some poles butts are large and will not fit with insert. To install PVC inserts, wet with a bit of soapy water then insert into the X-Rocket. Install lock bars on part XR-RH-S-D and part XR-RH-S-P so locks are on hood side of bracket. Install Add On Bracket lock bars so lock is on the bottom. Lock bars should be snug enough to move them but remain in place and don't move freely. Use 5/16" x 3/4" bolt with one washer between lock bar and bracket and one before lock nut. Use any padlock with up to 5/16" shackle or use a carabiner to keep poles in place while driving (not included).

## Single rod holder:

For Driver side install, use part JL-D, Driver side support bracket and part XR-RH-S-D. Rod Holder should be away from the hood and facing the rear of the vehicle. Place a protective cloth down on hood and fender to protect from accidental scratches while installing. Using the 13mm wrench, remove the hood latch. Using the 10mm socket with extension, remove the lower bolt. Install Driver side support bracket with original bolt but do not tighten. Insert hood latch into JL-D bracket and insert back into the fender making sure it goes through the inside support bracket. Use provided washer and M8 lock nut. Make sure bracket is straight with top edge of the fender and tighten. Next tighten lower bolt on the support bracket. Now install XR-RH-S-D to JL-D Bracket with provided M6 socket screw washer and lock nut. Choose hole for desired height. Test with poles before tightening. Duplicate this procedure for Passenger side using JL-P bracket, Passenger side support bracket and part XR-RH-S-P.

## Add-On X-Rocket (dual rod):

To install Add-On Rod holder part XR-RH-AD-S-D to driver side X-Rocket or part XR-RH-AD-S-P to passenger side X-Rocket line up Add-On bracket holes to X-Rocket bracket and secure with 2- 5/16" x 1" screws and lock nut. Add washer to side with lock nut.

For highway driving, we recommend use of Nite Ize® Gear tie or short bungee cord to limit movement (not included). When securing poles with ties, make sure poles are tucked closer to vehicle and not protruding past widest part of your vehicle which may be mirrors or tires.

## Required tools:



XR-RH-S-P

### Included Hardware:

- 1- Lock bar
- 1- 5/16x 3/4" Socket Screw
- 2- 5/16" Flat Washers
- 1- 5/16" Lock Nut
- 2- M6x16mm Socket Screw
- 2- M6 Flat Washers
- 2- M6 Lock Nuts



XR-RH-AD-S-P

### Included Hardware:

- 1- Lock bar
- 1- 5/16x3/4" Socket Screw
- 2- 5/16x1" Socket Screw
- 4- 5/16" Flat Washers
- 3- 5/16" Lock Nut



XR-RH-S-D

### Included Hardware:

- 1- Lock bar
- 1- 5/16x3/4" Socket Screw
- 2- 5/16" Flat Washers
- 1- 5/16" Lock Nut
- 2- M6x16mm Socket Screw
- 2- M6 Flat Washers
- 2- M6 Lock Nuts




XR-RH-AD-S-D

### Included Hardware:


- 1- Lock bar
- 1- 5/16x3/4" Socket Screw
- 2- 5/16x1" Socket Screw
- 4- 5/16" Flat Washers
- 3- 5/16" Lock Nut

# Installation Instructions

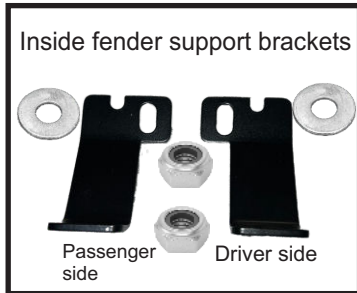

## Step 1

Protect fender and wheel well and layout all parts.

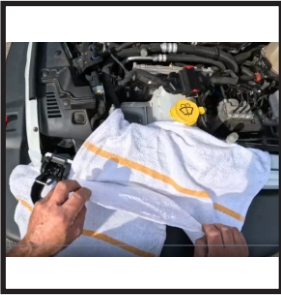

## Step 2

Remove hood latch with 13mm wrench.



## Step 2

Remove lower bolt with 10mm socket wrench with extension.



## Step 4

Install support bracket with bolt removed but do not tighten.



## Step 5

Insert hood latch to our bracket, then install to fender. Make sure to insert through support bracket and put washer and nut and tighten with wrench. Then Tighten lower support bracket bolt.



## Step 6

Add X-Rocket Brackets with hardware



## Step 7

Add Add-On X-Rocket rod holders with hardware



## Step 8

Go Catch some Fish

# Safety Information

1. Read all instructions before using this product
2. Check for missing or damaged parts
3. Do not exceed the vehicle maximum load capacity.
4. Always distribute load evenly. Heavier poles should be on the inner rod holder when set up for dual rods.
5. Always secure load with proper straps.
6. DO NOT exceed 65MPH while poles are mounted, not for extreme off road conditions
7. Follow D.O.T. Guidelines for installation and use.
8. Do not use if you feel your vision is obstructed. Follow all local and federal laws.
9. Be aware of road conditions! Sudden bumps and pot holes can cause an instant dynamic load on the cargo accessories which may result in damage to the equipment. Driving over a bump can create a brief excess load on your rack. Always check your load and hitch connections after going over any large bumps or dips in the road.
10. Check tension on bolts periodically.
11. Know clearance height when rods are installed, Low clearance bridges, garages and trees can cause damage to rods.

## Weight Rating:

Single Rod Holder has 10lb recommended limit including Add-On Bracket and Rods.



Failure to comply with these instructions and safety precautions can result in serious injury or damage to equipment or vehicle



# Maintenance and Service

Always inspect rack before use.

Check for:

- Loose or missing hardware
- Cracked or broken parts
- Any bent parts

**DO NOT** use rack or accessories if there is damage or missing parts.

Cleaning/Care:

- Clean with a mild soap and sponge or rag.
- Keep inside of receiver tube clean from debris
- Always thoroughly dry before storage.

## LIMITED WARRANTY

B&R Innovations, LLC (B&R) warrants this product to be free of defects in material and workmanship during the warranty period. Our warranty obligation is to provide a replacement for a defective original part if the part is covered by the warranty, after we receive a proper request from the warrantee (you) for warranty service.

### Who may request service?

Only a warrantee may request service. You are a warrantee if you purchased the product from B&R or from an authorized distributor AND B&R has been fully paid.

### What is an "original part"?

An original part is a part used to make the product as shipped to the warrantee.

### What is a "proper request"?

A request for warranty service is proper if B&R receives: 1) a photocopy of the Customer Invoice that displays the shipping date; AND 2) a written request for warranty service including your name and phone number. Send requests by any of the following methods:

Mail, Fax or Email

X-Rack c/o B&R Innovations, LLC

[Info@BandRinnovations.com](mailto:Info@BandRinnovations.com)

Fax: 917-677-8449

999 S. Oyster Bay Rd, Ste. 402

Bethpage, NY 11714

In the written request, list the parts believed to be defective and include the address where replacements should be delivered.

### What is covered under the warranty?

After B&R receives your request for warranty service, an authorized representative will contact you to determine whether your claim is covered by the warranty. Before providing warranty service, B&R may require you to send the entire product, or just the defective part or parts, to its facility in Bethpage, NY. The warranty covers defects in the following original dynamic components: motors, hydraulic pumps, electronic controllers, switches and cylinders. It also covers defects in original parts that wear under normal usage conditions ("wearing parts"), such as bearings, hoses, wheels, seals, brushes, and batteries.

### How long is the warranty period?

The warranty period for X-Rack Frame and Receiver tube is 1 year. The warranty period begins on the date when B&R ships the product to the warrantee. If the product was purchased from an authorized distributor, the period begins when the distributor ships the product. B&R may extend the warranty period for products shipped from authorized distributors by up to 30 days to account for shipping time.

### If a defective part is covered by the warranty, what will B&R do to correct the problem?

B&R will provide an appropriate replacement for any covered part. An authorized representative of B&R will contact you to discuss your claim.

### What is not covered by the warranty?

1. Labor;
2. Freight;
3. Occurrence of any of the following, which automatically voids the warranty:
  - Product misuse;
  - Negligent operation or repair;
  - Corrosion or use in corrosive conditions;
  - Inadequate or improper maintenance;
  - Damage sustained during shipping;
  - Accidents involving the product;
  - Unauthorized modifications: DO NOT modify the product IN ANY WAY without first receiving written authorization from B&R. Modification(s) might make the product unsafe to use or might cause excessive and/or abnormal wear.
4. Hardware
5. Non X-Rack accessories
6. Powder coating chips and scratches, and is very difficult to fix or repair. Chips and scratches are a direct result from day to day use and are not covered under warranty.

### Do any other warranties apply to the product?

B&R makes no other express warranties. All implied warranties are disclaimed to the extent allowed by law. Any implied warranty not disclaimed is limited in scope to the terms of this Limited Warranty.